


Lift Kit Instructions for Flex Coil-NH-IH 10" Augers

- #1. Remove safety plates on the bottom of the auger where the auger pivots from.
- #2. Lower the auger by releasing the transport handle, this should give you enough room to install the new plates that we have sent **(THE AUGER IS ONLY LIFTED AN INCH AND A HALF WITH THESE PLATES)**
- #3. Now take the two small plates and bolt them in to hold the auger in place.
- #4. Now pound the roll pin out on the top saddle at the back of the cart, lift it out and put the piece of pipe provided in this spot.

NOTE: The roll pin will not go back in place but the weight of the auger will hold the saddle from coming out.

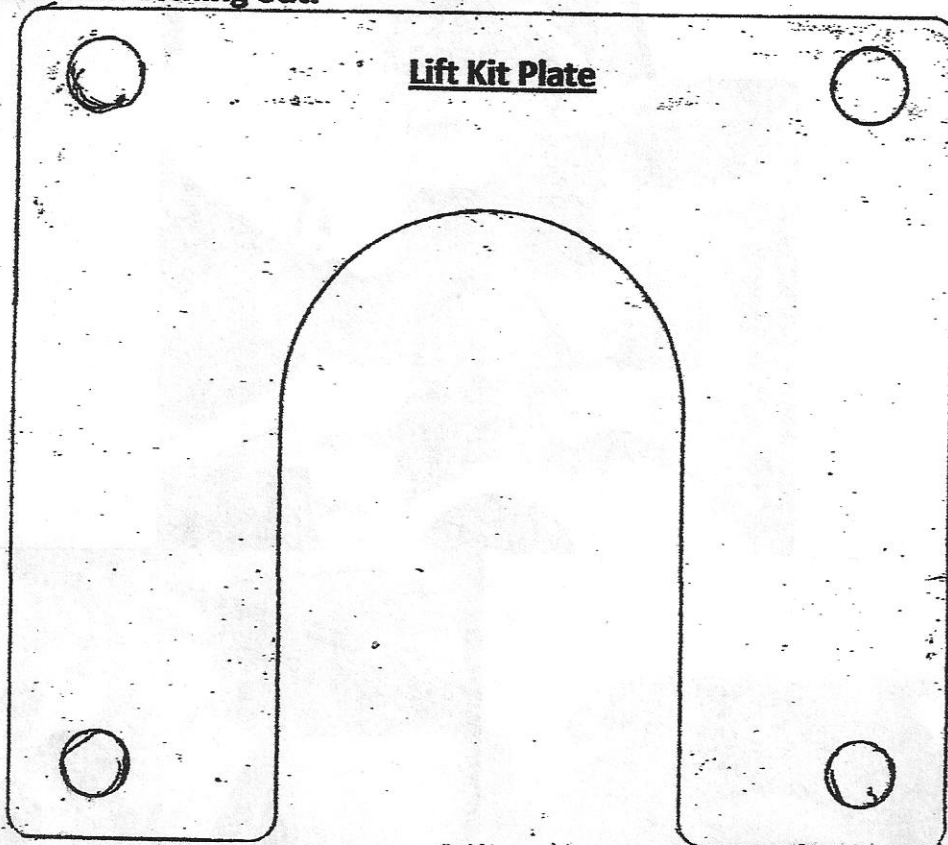

Kevin Lisafeld (306)487-7993

Cory Lischka (306)487-7721